

Midi free-standing Beacons / Flash Light 828

Flashing Beacon BM 10-60VAC/DC YE



Part No.: 828.380.70



MECHANICAL DATA	
Height	137 mm
Diameter	98 mm
Materials	PC PC/ABS
Dome colour	Yellow
Housing colour	Black
Protection category	IP65
Connection	Screw terminals
cross-sectional area maximum	2,50mm ² / 14AWG
Cable entry	Rubber pinch
Cable entry minimum	d = 5 mm
Cable entry maximum	d = 7 mm
Type of fixing	Base mounting
Working temperature minimum	-20°C
Working temperature maximum	+45°C
Weight with packaging	285 g
Product weight	239 g

ELECTRICAL DATA	
Operating voltage	10-60V
Operating voltage type	AC/DC
Operating voltage frequency	50Hz
Operating voltage tolerance	+/- 0%
Rated operational voltage	24 VDC
Rated operational current	500 mA
Rated inrush current	12.000 mA
Protection class	Protection class 2
Pollution degree	3
Overvoltage category	II
Isolation voltage	Ui = 250V; Uimp = 2.500V

OPTICAL DATA	
Light source	Xenon
Light colour	Yellow
Optical signal image	Flash
Flash frequency	1 Hz
Flash output	5 J
Service life optical	4 million flashes minimum

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.



Midi free-standing Beacons / Flash Light 828

Flashing Beacon BM 10-60VAC/DC YE


APPROVAL DATA		
Conforms with CE	Yes	
Conforms with RoHS directive	Yes	
WEEE	Yes	
Conforms with ATEX-directive	No	
Conforms with CCC	No	
Conforms with UL	No	
Conforms with FCC	No	
Conforms with IC	No	
EAC certificate available	Yes	
Conforms with UKCA (Importer)	Yes (WERMA (UK) Ltd.)	
Conforms with AS-I	No	
ICAO Certification	No	
Conforms with DNV	No	
Conforms with RoHS CN	No	
Conforms with VdS	No	

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.



Midi free-standing Beacons / Flash Light 828

Flashing Beacon BM 10-60VAC/DC YE

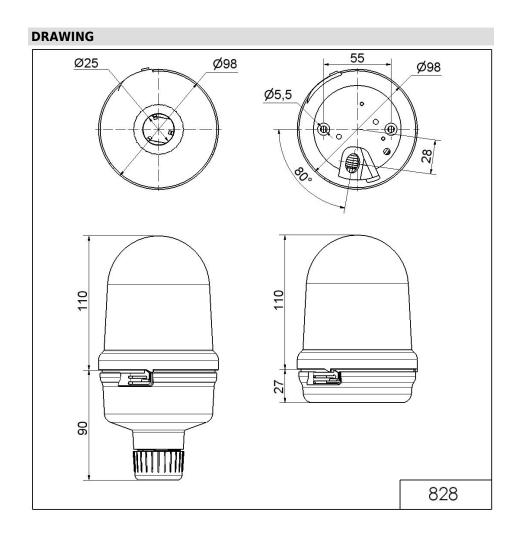

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.